

Environmental Sensors and Actuators User Guide

Copyright © 2022 Legrand
sensorguide-1K-4.0.20
September 2022
Revision 1K - Xerus 4.0.20

Contents

What's New in the Environmental Sensors and Actuators Guide	4
Sensor Overview	5
Supported Managing Products.	5
Sensor Support Guidelines.	6
Sensor Comparison.	6
DX2 Series	7
DX2-DH2C2 Door Handle Controller.	7
Bracket Installation.	10
DX2-DH2C2 LED States.	11
DX2 Temperature and Humidity Sensors.	11
DX2 LED States for Temperature and Humidity.	12
DX2-T1DP1 - Temperature and Differential Air Pressure Sensors.	13
DX2-AF1 - Airflow Sensors.	14
DX2-AF1 LED States.	15
DX2-WS1 - Water Sensors.	16
DX2-WS1 LED States.	18
Floor-mounted Water Sensor.	18
Cable Water Sensor.	19
DX2-CC2 Contact Closure Sensor.	21
Connecting Detectors/Switches to DX2-CC2.	22
Configuring DX2-CC2's Normal State.	24
DX2-CC2 Contact Closure Sensor LEDs.	25
DX2-D2 Dual Dry-Contact Sensor.	25
DX2-D2C6 Dry Contact Contact Closure Sensor.	26
DX2-PD2 - Dual Powered Dry-Contact Sensor.	29
DX2-PD2C5 Powered Dry Contact and Contact Closure Sensor.	30
DX2-PS - Particle Sensor.	33
DX2-PIR Proximity Infrared Sensor.	34
Cascading DX2 Sensor Packages.	35
DX Series	37
DX-D2C6 Dry Contact and Contact Closure Sensor.	37
DX-PD2C5 - Powered Dry Contact and Contact Closure.	40
DX-PIR Proximity Infrared Sensor.	43
DX-D4C3 Dry Contact and Contact Closure Sensor.	45
DX-VBR Vibration Sensor.	48
Making Connections.	49

Pre-installed DX Brackets.	49
Connecting Detectors/Actuators to DX.	50
Cascading DX Sensor Packages.	52
Adjusting DIP Switches.	53
Sensor-Mixing	54
Supported Maximum Sensor Distance	55
Supported Maximum Number of Sensors and Actuators	56
Sensor Measurement Accuracy	57
DX2 Sensor Accuracy.	57
Sensor Firmware Update	58
Sensor Naming Conventions	59
Index	60

What's New in the Environmental Sensors and Actuators Guide

The following sections have changed or information has been added to the Environmental Sensors and Actuators guide based on enhancements to the environmental sensor packages and/or user documentation.

► *New sensors in the DX2 Series:*

- [DX2-D2 Dual Dry-Contact Sensor](#) (on page 25)
- [DX2-D2C6 Dry Contact Contact Closure Sensor](#) (on page 26)
- [DX2-PD2 - Dual Powered Dry-Contact Sensor](#) (on page 29)
- [DX2-PD2C5 Powered Dry Contact and Contact Closure Sensor](#) (on page 30)
- [DX2-PS - Particle Sensor](#) (on page 33)
- [DX2-PIR Proximity Infrared Sensor](#) (on page 34)

► *End of support:*

DPX, DPX2, and DPX3 sensors and the DPX-ENVHUB and DPX3-ENVHUB4 sensor hubs are no longer supported.

Sensor Overview

► *Sensors versus actuators:*

A sensor can detect the environmental condition, such as temperature, humidity, and water presence.

An actuator can control a system or mechanism, such as opening and closing a door handle.

► *Suggested interval between connections (or disconnections) of diverse sensor package connections:*

For proper operation, wait for 15~30 seconds between each connection operation or each disconnection operation of environmental sensor packages.

In This Chapter

Supported Managing Products.	5
Sensor Support Guidelines.	6
Sensor Comparison.	6

Supported Managing Products

The following products support environmental sensor packages. For exceptions, see [Sensor Support Guidelines](#) (on page 6).

► *Raritan products:*

- PX2
- PX3
- PX3TS transfer switch
- PX4

- Branch Circuit Monitor 2 (BCM2), PMC and PMMC
- PXC
- PXO
- Smart Rack Controller (SRC)

► *Legrand products:*

- Legrand PDUs

► *Server Technology products:*

- PRO3X
- PRO4X

Sensor Support Guidelines

The products listed in the section [Supported Managing Products](#) (on page 5) support all types of Legrand environmental sensor packages except for the following restriction.

- Only PX3, PX3TS, SRC, PXC and Legrand PDUs support door handle controllers, such as DX2-DH2C2.

Sensor Comparison

Sensor family	Connection interface	Support for sensor daisy chain	Support for a sensor hub	Automatic sensor firmware update
DX	RJ-45	✓	✓	✓
DX2	RJ-45	✓	✓ (1)	✓

(1) The hubs, DX2-ENVHUB4 and DX2-REMHUB4, are supported by DX2 sensor packages only. DX2-REMHUB4 is only supported with SRC-0800/0803.

DX2 Series

A DX2 sensor package consists of two RJ-45 ports and sensors and/or terminals.

Different DX2 sensor packages have a different number of sensors, actuators and/or terminals.

See [Sensor Comparison](#) (on page 6) for supported optional hubs.

► *With standard network patch cables (CAT5e or higher), you can:*

- Connect a DX2 sensor to a supported managing product with the "RJ-45" SENSOR port.

Exception: For a device with an "RJ-12" SENSOR port, an RJ-12 to RJ-45 adapter cable (part number: RJ12M-RJ45M) is needed.

- Daisy chain DX2 sensor packages.

Warning: Do NOT use a crossover cable for connection.

In This Chapter

DX2-DH2C2 Door Handle Controller.	7
DX2 Temperature and Humidity Sensors.	11
DX2-T1DP1 - Temperature and Differential Air Pressure Sensors.	13
DX2-AF1 - Airflow Sensors.	14
DX2-WS1 - Water Sensors.	16
DX2-CC2 Contact Closure Sensor.	21
DX2-D2 Dual Dry-Contact Sensor.	25
DX2-D2C6 Dry Contact Contact Closure Sensor.	26
DX2-PD2 - Dual Powered Dry-Contact Sensor.	29
DX2-PD2C5 Powered Dry Contact and Contact Closure Sensor.	30
DX2-PS - Particle Sensor.	33
DX2-PIR Proximity Infrared Sensor.	34
Cascading DX2 Sensor Packages.	35

DX2-DH2C2 Door Handle Controller

DX2-DH2C2 provides a cabinet access control solution. Connect supported door handles to DX2-DH2C2, then connect DX2-DH2C2 to a supported managing device, and you will be able to control a cabinet's door handles via the device's web interface.

► *Door handles supported by DX2-DH2C2:*

- a. SouthCo H3-EM series:

- H3-EM-60-100
- H3-EM-62-100
- H3-EM-64-100
- H3-EM-65-100
- H3-EM-66-100
- H3-EM-67-100
- H3-EM-68-100

b. EMKA series:

- 1150-U5x
- Agent-E


c. Dirak series:

- MLR1000
- MLR2000
- MLR2000KP

Note: SmartLock kits include both DX2-DH2C2 and one of the listed door handles.

With some door handles, while you open and close one door handle, the second door handle is powered off briefly to conserve power. Once the first door handle is closed and locked, power resumes to the second handle and it is ready to use.

► *DX2-DH2C2 ports and terminals:*

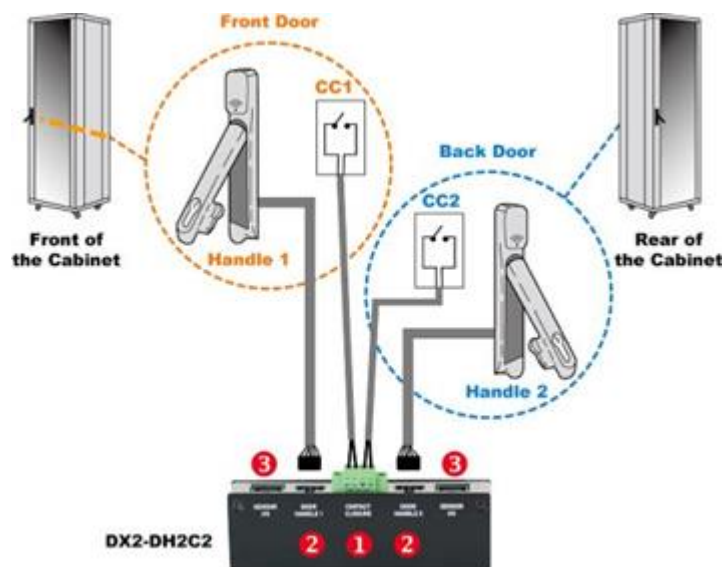

Number	Component	Function
1	Two pairs of contact closure sensor terminals	Connect to third-party contact closure detectors/switches for detecting the door open/closed status. For information on connecting CC sensors, see Connecting Detectors/ Switches to DX2-CC2 (on page 22).
2	Two door handle ports	Connect to the standard category cable of the door handle contained in the DX2-DH2C2 kit. The two door handles are usually attached to different doors of the same cabinet.
3	Two RJ-45 ports	Connect a standard network patch cable to: <ul style="list-style-type: none"> Connect to the SENSOR port (yellow) of a supported managing device. Cascade DX2 sensor package(s). <hr/> Exception: You CANNOT cascade DX2-DH2C2 packages.

► **Installation restrictions:**

Read the restrictions below before connecting DX2-DH2C2.


- Only PX3, PX3TS, PXC, SRC or Legrand PDUs are supported managing devices for DX2-DH2C2.
- Up to one DX2-DH2C2 package can be connected per supported managing device.
- Always connect DX2-DH2C2 directly to the sensor port. If you are cascading with other sensors, the DX2-DH2C2 must be in the first position, directly connected to the sensor port.
- Only the door handles sold with DX2-DH2C2 are supported.

- No asset management strips can be connected simultaneously.
- No hot plugging or hot swapping with door handles while DX2-DH2C2 is being connected.
 - That is, no connection or disconnection of door handles when they are powered.
- Maximum cabling length of 29 feet (9 meters). For details, see [Supported Maximum Sensor Distance](#) (on page 55).


Bracket Installation

You can install the bracket accompanying DX2-DH2C2 in order to hang or fasten it properly on an object or position. The bracket can be installed either onto the bottom of DX2-DH2C2 or onto one of its sides.

- *Bracket installed onto DX2-DH2C2's bottom:*

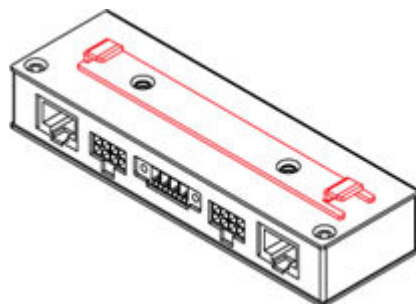

- *Bracket installed onto the side of DX2-DH2C2:*

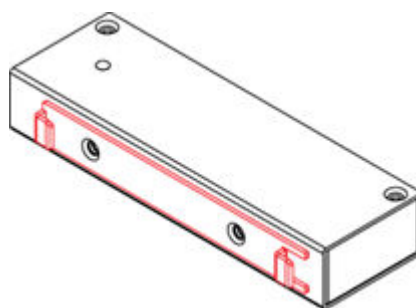

DX2-DH2C2 LED States

The DX2-DH2C2 controller's LED flashes when performing any of the following actions.

Actions	LED states
A valid smart card is being scanned	Fast blinking <ul style="list-style-type: none"> • 5 Hz frequency
The door handle lock is open	Slow blinking <ul style="list-style-type: none"> • 1 Hz frequency
Sensor firmware is being updated. See Sensor Firmware Update (on page 58).	Slightly fast blinking <ul style="list-style-type: none"> • 2.5 Hz frequency


DX2 Temperature and Humidity Sensors

There are five types of DX2 temperature and humidity sensor packages.

Package	Package content
DX2-T1	Contains one DX2-T1 sensor package, which detects the temperature.
DX2-T1H1	Contains one DX2-T1H1 sensor package, which detects both the temperature and humidity.

DX2-T2H1	Contains the following: <ul style="list-style-type: none"> • One DX2-T1H1 sensor package. • One DX2-T1 sensor package.
DX2-T3H1	Contains the following: <ul style="list-style-type: none"> • One DX2-T1H1 sensor package. • Two DX2-T1 sensor packages.
DX2-T2H2	Contains the following: <ul style="list-style-type: none"> • Two DX2-T1H1 sensor package.

The following diagram shows a DX2-T1 or DX2-T1H1 sensor package.

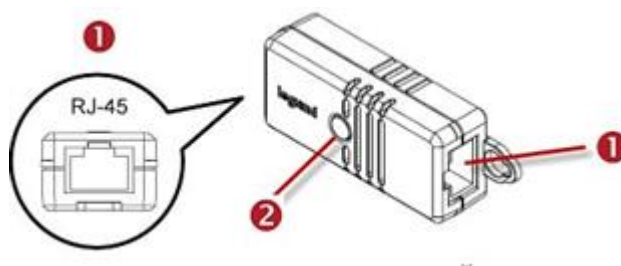

Number	Component	Function
1	Two RJ-45 ports	Connect a standard network patch cable to: <ul style="list-style-type: none"> • Connect to the Sensor port of the supported managing device Cascade DX2 sensor package(s).
2	Status LED	Indicate the sensor status. See DX2 LED States for Temperature and Humidity (on page 12).

DX2 LED States for Temperature and Humidity

The DX2 sensor indicates an alert by making its LED flash on and off. The LED also flashes when the sensor is upgrading its firmware.


► DX2-T1:

LED states	Description
Off	Temperature is in the normal state.
Flashing (1 flash and 1 off)	Temperature enters either alarmed state: warning or critical.
High-speed flashing	Sensor firmware is being updated. See Sensor Firmware Update (on page 58).

► DX2-T1H1:

LED states	Description
Off	Both temperature and humidity are in the normal state.
Flashing	1 flash and 1 off Temperature enters an alarmed state: warning or critical. Humidity is in the normal state.
	2 flashes and 1 off Temperature is in the normal state. Humidity enters an alarmed state: warning or critical.
	3 flashes and 1 off Both temperature and humidity enter an alarmed state: warning or critical.
High-speed flashing	Sensor firmware is being updated.

DX2-T1DP1 - Temperature and Differential Air Pressure Sensors

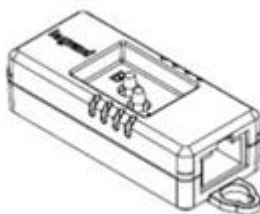

DX2-T1DP1 detects temperature and differential air pressure. This sensor is designed to receive the inputs of two pressure levels. Differential air pressure is measured by reading the difference of the two inputs.


DX2-T1DP1 sensor packages come with one DX2-T1DP1 sensor and 2 tubes for connecting to the air pressure nozzles.

► *Connecting the DX2-T1DP1 Sensor:*

When the DX2-T1DP1 sensor is plugged into the RJ-45 sensor port of a supported managing device, it will be automatically detected.


► *Connecting Tubes to the DX2-T1DP1:*

- 1) Connect the tubes to each pressure nozzle of the sensor to receive two air pressure inputs. If necessary, cut the tubes so that the tube length meets your needs.
- 2) Place each tube's grommet in an appropriate location where you want to detect differential air pressure levels, positioning the higher tube in the higher air pressure area, and the lower tube in the lower air pressure area.

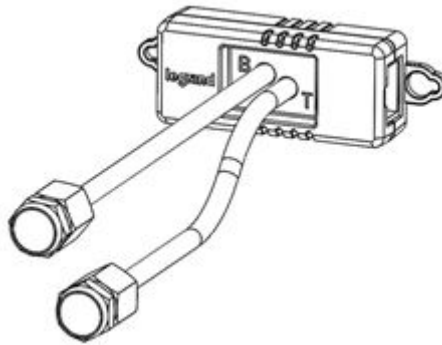

- The B label indicates the tube connected to bottom side of the sensor. The T label indicates the tube connected to the top side of sensor. The T tube measures positive pressure. An increase in positive pressure will result in an increase in sensor output.
- When tubes are disconnected, or when there is no airflow, consider a reading of $\pm 0.75\text{pa}$ as a neutral/zero reading.

DX2-AF1 - Airflow Sensors

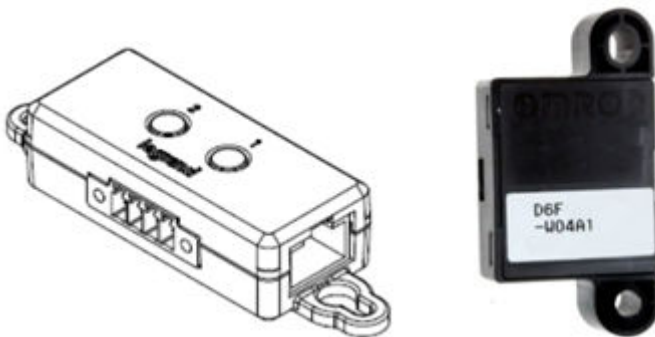

DX2-AF1 airflow sensor packages come with one DX2-AF1 airflow sensor and one airflow detector with a 2-pin connector.

► *Connecting the DX2-WS1 Sensor:*


When the DX2-AF1 sensor is plugged into the RJ-45 sensor port of a supported managing device, it will be automatically detected.

The DX2-AF1 provides a terminal to attach the airflow sensing accessory.

See [DX2-CC2 Contact Closure Sensor](#) (on page 21) for more details on general terminal connections.

► *Connecting airflow detectors:*

Connect the airflow detector so that the sensor faces the source of the air movement (such as a fan) in the appropriate orientation as indicated by the arrow on that sensor.

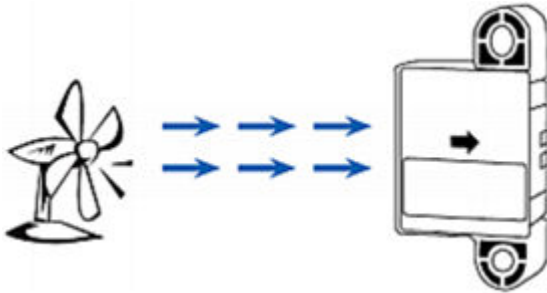


DX2-AF1 LED States

The airflow sensor shows alerts or firmware updates through its LED states.

LED states	Description
Off	Airflow state is normal.
Flashing (1 flash and 1 off)	Airflow enters either alarmed state: warning or critical.
High-speed flashing	Sensor firmware is being updated. See Sensor Firmware Update (on page 58).

DX2-WS1 - Water Sensors

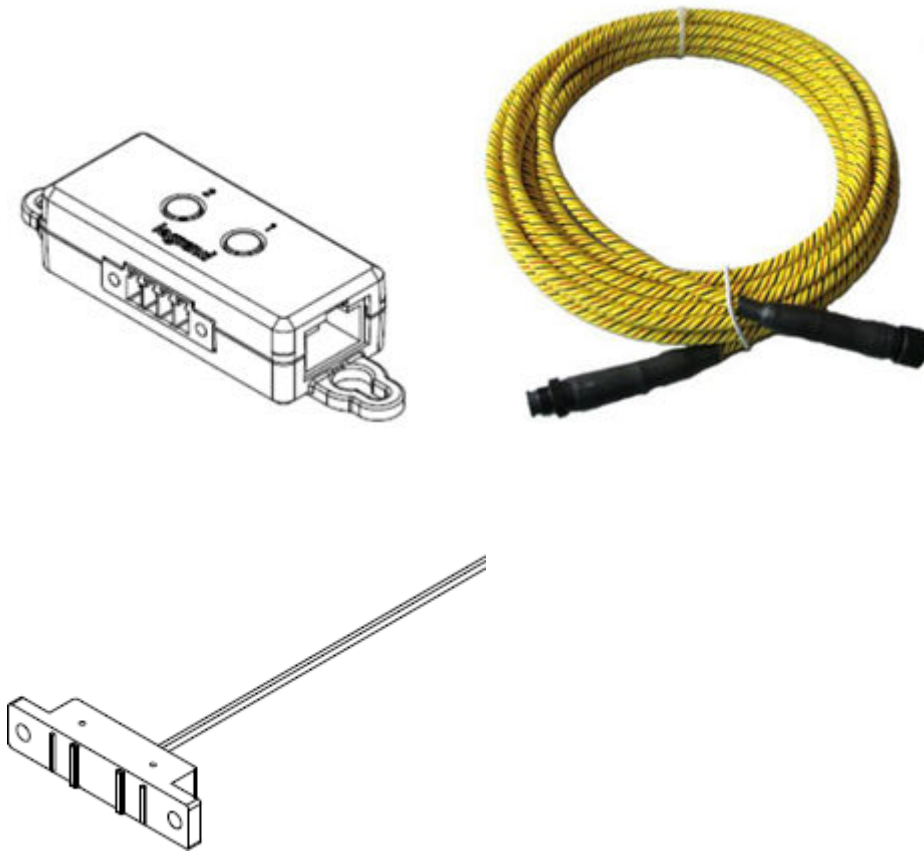

DX2-WS1 water sensors are available in Rope and Floor Sensor packages. Each package contains one DX2-WS1 water sensor head with 2 terminals, and either one Rope sensor cable, or one floor mounted sensor cable.

► *Connecting the DX2-WS1 Sensor:*

When the DX2-WS1 sensor is plugged into the RJ-45 sensor port of a supported managing device, it will be automatically detected.

The DX2-WS1 provides terminals to attach the water sensing accessories.

- 1 Water Rope input channel with water present status, cable and leakage distance detection
- 1 Floor Water Cable input channel with water present status detection only

► *Rope Sensor:*

- Detects the presence of water/liquid
- Detects nearest leak position on the cable and reports the distance
- Available in 3.5m, 7m and 10m lengths
- See [How a Cable Water Sensor Works](#) (on page 20)

► *Connecting the Rope Sensor to the terminals:*

- Connect the rope sensor wires to the terminals as shown in the diagram.
- The black wire is the sensing wire that changes leak detection status.



► *Floor Sensor:*

- Detects the presence of water/liquid
- Available in 3.5m, 7m and 10m lengths
- See [How a Floor-mounted Water Sensor Works](#) (on page 19)

► *Connecting the Floor Sensor to the DX2-WS1:*

- Connect the floor sensor wires to the terminal as shown in the diagram.



► *Mounting the Floor Sensor:*

- See [Floor-mounted Water Sensor](#) (on page 18).

DX2-WS1 LED States

The water sensor shows alerts or firmware updates through its LED states.


LED states	Description
Off	Water Leakage state is normal.
Flashing (1 flash and 1 off)	Water Leakage enters either alarmed state: warning or critical.
High-speed flashing	Sensor firmware is being updated. See Sensor Firmware Update (on page 58).

Floor-mounted Water Sensor

The floor-mounted water sensor has a flat bottom so it can stand on the ground. The water detector's dimension is 63.5 mm x 13.25 mm x 13.2 mm (W x L x D).

Use one of the following methods to affix this detector to the ground:

- Screw the detector to the ground with your own screws. To avoid breaking the detector's enclosure, do not over tighten the screws.
- Put something weighing around 100 to 250 grams (0.22 to 0.55 pounds) into the empty bag shipped with this water sensor. Then use cable ties to wrap the bag right above the detector. Make sure the detector is not tilted so that its bottom evenly contacts the ground.

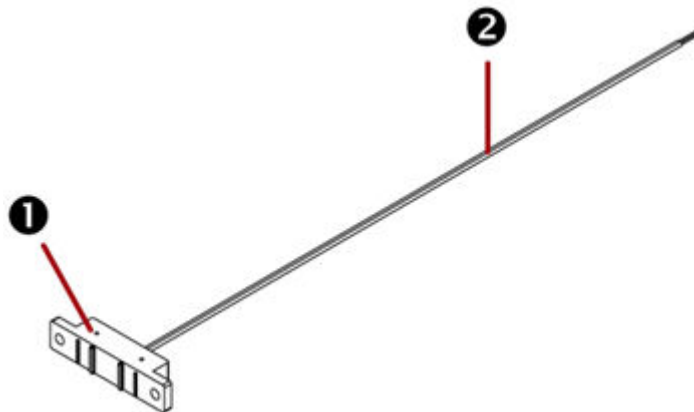


Number	Item
1	Water detector.

Number	Item
2	<p>Wires to connect to the contact closure sensor.</p> <p>You need a minimum of 30 cm wires to prevent the contact closure sensor from being damaged by floor water (if any). Below are the wire length limitations:</p> <ul style="list-style-type: none"> • Minimum: 30 cm (11.8 inches) • Maximum: 150 cm (59 inches)

How a Floor-mounted Water Sensor Works


The floor-mounted water sensor uses *two poles* marked with red arrows below to detect the water.

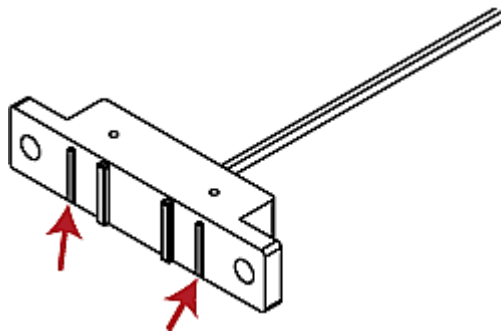

When water is present between the 2 poles, the water sensor will trigger the alarm.

Cable Water Sensor

The cable water sensor is in the shape of a cable so it can be flexibly placed, twisted or wrapped around a location where water may drip, such as a ceiling tile, water pipe or the floor.

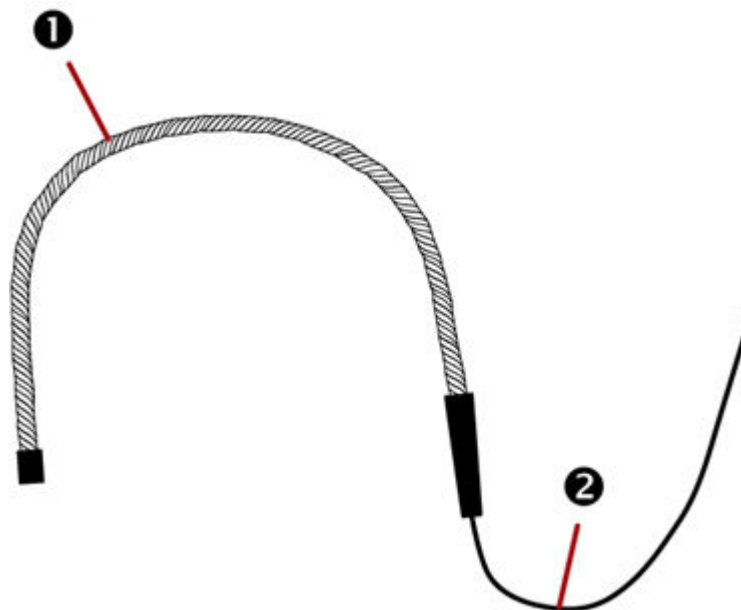


Number	Item
1	Cable-shaped water detector.
2	<p>Wires to connect to the contact closure sensor.</p> <p>You need a minimum of 30 cm wires to prevent the contact closure sensor from being damaged by floor water (if any). Below are the wire length limitations:</p> <ul style="list-style-type: none"> • Minimum: 30 cm (11.8 inches) • Maximum: 150 cm (59 inches)

How a Cable Water Sensor Works

The cable water sensor uses *black* wires on the water rope to detect the water. When water is present between two black wires, the water sensor will trigger the alarm.

► Mechanical information about black wires:

- The distance between two black wires is about 0.3 in.
- The distance from the black wire to the cable surface is about 0.05 in.

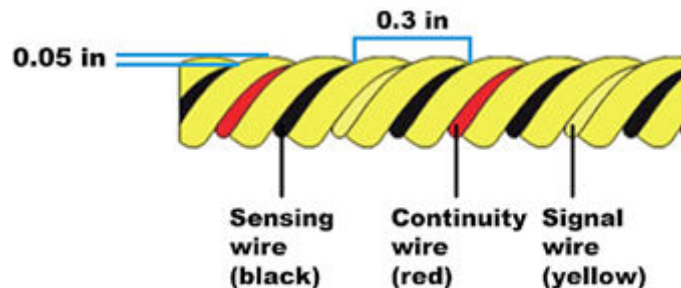

► Water detection requirements:

- The water spot must be at least 0.5" wide so that two black wires are in the water at the same time. When water is present between the two black wires the water sensor will trigger the alarm.
If the water spot is about 1" wide, the water sensor should detect it at any location of the water rope.
- The *thickness* of the water spot should be at least 0.1" because there is some gap between any black wire and the cable surface.
This is why the cable water sensor does NOT work well with the concrete floor but works fine with ceramic tiles. The concrete floor absorbs the water quickly so it needs more water on the concrete floor to trigger the alarm.
- The alarm requires some water between two black wires for a while. If there are just few water drops on the cable water sensor, no alarms are triggered.
- The water sensor's rope should be mounted on the floor firmly, or the water sensor cannot detect the water.

In the following diagram, NO alarm is triggered by the presence of the water, which is indicated by the blue color, because the water sensor's rope does not evenly contact the floor.




DX2-CC2 Contact Closure Sensor

Contact closure sensors can detect the open-and-closed status of connected detectors/switches.

There are two channels for connecting two discrete detectors/switches (state: on/off).

Four termination points are available on this sensor: the two to the right are associated with one channel, and the two to the left are associated with the other.

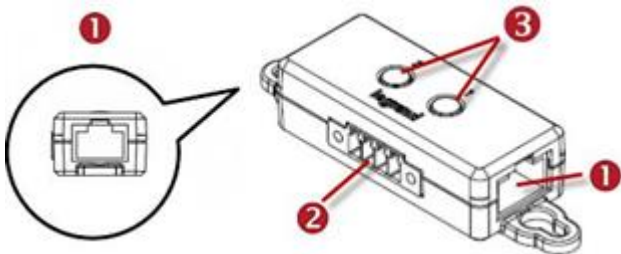

Number	Component	Function
1	Two RJ-45 ports	Connect a standard network patch cable to: <ul style="list-style-type: none"> Connect to the Sensor port of the supported managing device Cascade DX2 sensor package(s).
2	Two pairs of termination points	Connect two discrete detectors/switches.
3	Two LEDs	Indicate two channels' status.

► *Supported detector/switch types:*

At a minimum, a discrete detector/switch is required for DX2-CC2 to work properly. The types of discrete detectors/switches that can be connected to DX2-CC2 include those for:


- Door open/closed detection
- Door lock detection
- Smoke detection
- Vibration detection

When using third-party probes, you must test them with DX2-CC2 to ensure they work properly.

Important: Integration and testing for third-party detectors/switches is the sole responsibility of the customer. Legrand cannot assume any liability as a result of improper termination or failure (incidental or consequential) of third-party detectors/switches that customers provide and install. Failure to follow installation and configuration instructions can result in false alarms or no alarms. Legrand makes no statement or claims that all third-party detectors/switches will work with Legrand's contact closure sensors.

► *To make DX2-CC2 work properly:*

- 1) Connect 1 to 2 contact closure detectors/switches to DX2-CC2. See [Connecting Detectors/Switches to DX2-CC2](#) (on page 22).

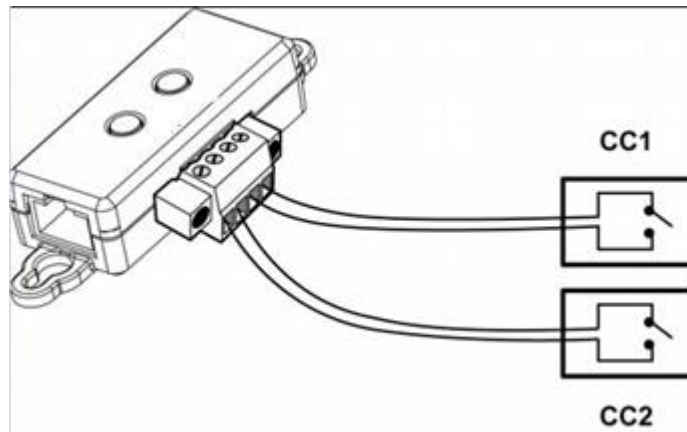


- 2) Connect DX2-CC2 to a supported managing device.
- 3) Log in to the managing device, and configure Normally Open or Normally Closed for DX2-CC2.
 - See [Configuring DX2-CC2's Normal State](#) (on page 24).

Connecting Detectors/Switches to DX2-CC2


DX2-CC2 comprises two parts: sensor box and terminal module. The terminal module is detachable so it is convenient to connect/disconnect discrete detectors/switches.

► *To make connections when the terminal module is attached:*

- 1) Strip the insulation around 12 mm from the end of each wire of discrete detectors/switches.
- 2) Fully insert each wire of both detectors/switches into each termination point.
 - Plug both wires of a detector/switch into the two termination points to the left.
 - Plug both wires of the other detector/switch into the two termination points to the right.

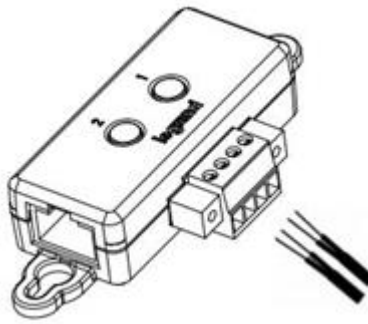

- 3) Use a screwdriver with a 2.5 mm wide shaft to tighten the screws above each termination point to secure the wires, using a torque of 0.196 N·m (2 kgf·cm).

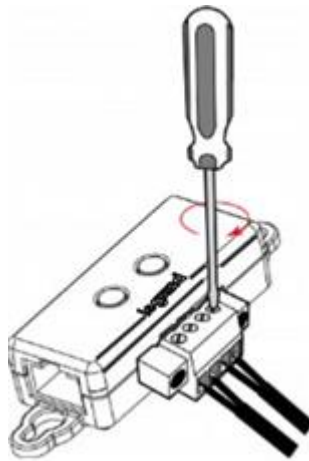


► *To make connections after the terminal module is separated:*


You can also connect a detector/switch when the terminal module is separated from the sensor box.

- 1) Loosen the screws at two sides of the terminal module.


Note: The two screws are not removable so just loosen them.

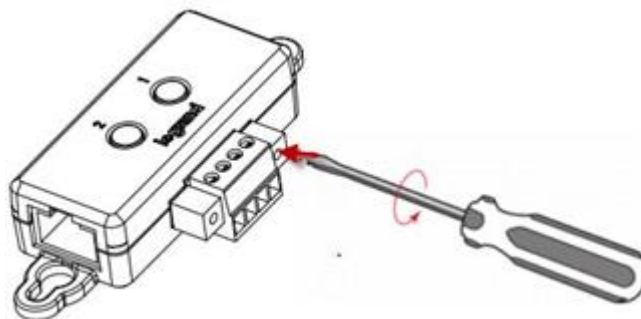

- 2) Separate the terminal module from the sensor box.

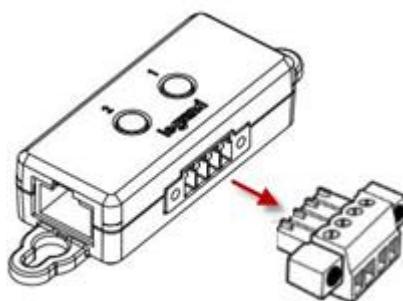

- 3) After connecting detectors/switches to the terminal module, plug the terminal module back into the sensor box, and then tighten the screws at two sides of the terminal module.

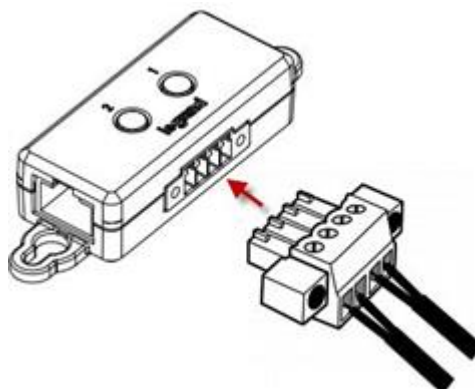

Configuring DX2-CC2's Normal State

Before using DX2-CC2 for detection, select the normal state of DX2-CC2 via the software application of the supported managing device where this DX2-CC2 is being connected.

► *To select the normal state of DX2-CC2:*

- 1) Log in to the web interface of the product where DX2-CC2 is being connected.
- 2) On the Peripherals page, select the sensor you want to configure. Click Edit Settings to configure polarity.
 - a. Choose one of the normal state options.

Option	Description
Normally Open	<div>Factory default.</div> <ul style="list-style-type: none">It is considered normal when the switch/detector connected to DX2-CC2 is open.When the switch/detector turns closed, an alarm is shown.
Normally Closed	<ul style="list-style-type: none">It is considered normal when the switch/detector connected to DX2-CC2 is closed.When the switch/detector turns open, an alarm is shown.

DX2-CC2 Contact Closure Sensor LEDs

LED description in this section applies to all contact closure sensors.

LEDs indicate states of detectors/switches connected to the contact closure sensor channels.

The LED is lit when the associated detector/switch enters the "alarmed" state.

The meaning of a lit LED varies depending on the Normal state settings.

- When the Normal state is set to Normally Closed (N.C):

LED	Sensor state
Off	Closed
Lit	Open


- When the Normal state is set to Normally Open (N.O):

LED	Sensor state
Off	Open
Lit	Closed

DX2-D2 Dual Dry-Contact Sensor

DX2-D2 provides:


- Two RJ45 connectors - for connection to sensor port and chaining
- Two LEDs
- Two dry contacts

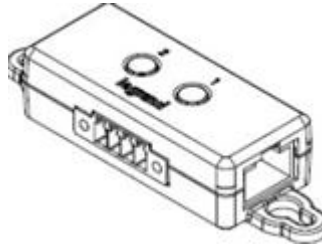

► *Details:*

- Each dry contact has two terminals that DX2-D2 connects/disconnects from each other similar to a relay.
- Initial state after power up is OFF.
- If auto-management is enabled, dry contacts will be auto-managed.
- Dry contact port's LED is lit if this port is in "on" state.

► *Channel Assignment:*

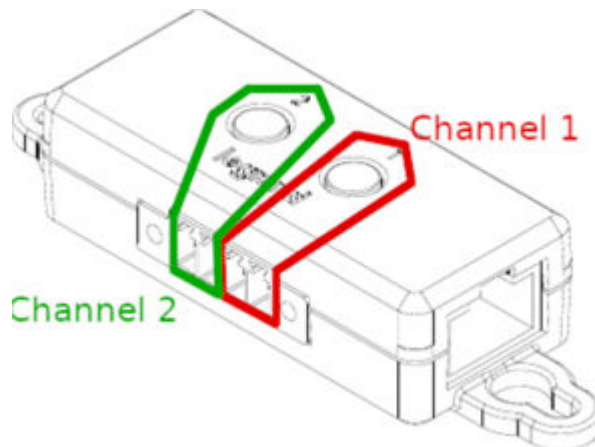


DX2-D2C6 Dry Contact Contact Closure Sensor

DX2-D2C6 is a multiple dry contact and contact closure sensor. It has seven channels for both contact closure sensors and dry contact signal actuators. DX2-D2C6 sensor package provides:

- Two RJ45 connectors - for connection to the Sensor port of the supported managing device and chaining
- Five contact closures
- One magnetic sensor

- Two dry contacts (max. 48V AC/DC, max. 1A non inductive load)
- Six DIP switches
- Five LED

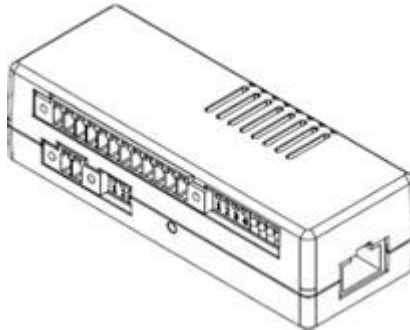

► *DX2-D2C6 Label:*

The label attached to DX2-D2C6 helps you identify different channels.

CC2	CC3	DC1	CC4	CC5	DC2
1 2	3 4	5 6	7 8	9 10	11 12
CC1					
1 2					


- CC represents a contact closure sensor channel. There are five CC channels: CC1 through CC5
- DC represents a dry contact signal actuator channel. There are two DC channels: DC1 and DC2



► *DX2-D2C6 hall effect sensor (reserved):*



DX2-D2C6 contains a built-in hall effect sensor, which can detect whether a door is open or closed. The hall effect sensor is reserved for future use. After connecting DX2-D2C6 to a managing device, this built-in sensor will be detected and show up the web interface and SNMP MIB, which is normal.

► *DX2-D2C6 terminals, DIP switches, and LEDs:*

Terminals, DIP switches, and LEDs are located in two rows as shown below.

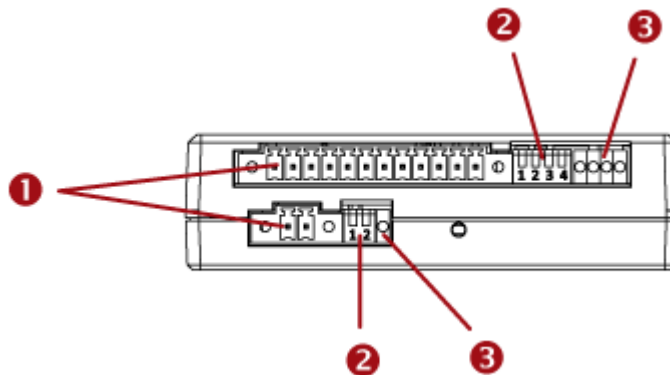

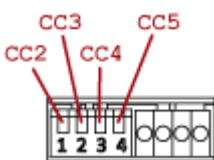
Numbers	Components
<p>1</p>	<p>CC and DC channels.</p> <ul style="list-style-type: none"> • <i>Top row:</i> Four CC channels (CC2 - CC5). Two DC channels (DC1 - DC2). • <i>Bottom row:</i> One CC channel (CC1). <p>See Connecting Detectors/Switches to DX2-CC2 (on page 22) for how to connect CC sensors or DC actuators.</p>
<p>2</p>	<p>Dip switches for configuring the Normal state of each CC channel. See Adjusting DIP Switches (on page 53).</p> <ul style="list-style-type: none"> • <i>Top row:</i> Dip switch 1 controls CC2. Dip switch 2 controls CC3. Dip switch 3 controls CC4. Dip switch 4 controls CC5.  <ul style="list-style-type: none"> • <i>Bottom row:</i> Dip switch 1 controls CC1. 

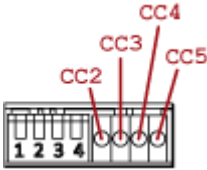Numbers	Components
	<p>Dip switch 2 controls the built in hall effect sensor.</p> <hr/> <p>Tip: If an alert is shown for this hall effect sensor, you can disable it by turning on/off DIP switch 2.</p> <hr/>
<p>3</p>	<p>CC status LEDs. For details, see DX2-CC2 Contact Closure Sensor LEDs (on page 25).</p> <p>High-speed flashing of CC1 LED indicates that the sensor is currently upgrading firmware.</p> <ul style="list-style-type: none"> <p><i>Top row:</i></p> <p>The four LEDs, from left to right, indicate the states of CC2, CC3, CC4 and CC5 respectively.</p>  <p><i>Bottom row:</i></p> <p>The LED indicates the CC1 state.</p> 

DX2-PD2 - Dual Powered Dry-Contact Sensor

DX2-PD2 provides:


- Two RJ45 connectors - for connection to the Sensor port of the supported managing device and chaining
- Two LEDs
- Two powered dry contacts

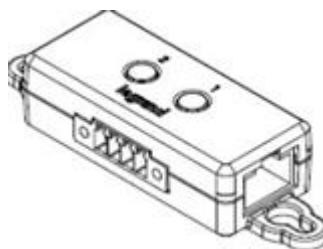

► *Details:*

- Powered dry contact is a switchable
- Used for low power control applications, such as indicator light, buzzer, or 12 volt relay
- The initial state (after power on) of a powered dry contact is OFF
- During firmware update, the powered dry contact states are preserved
- If auto-management is enabled, dry contacts will be auto-managed
- Powered Dry Contact port's LED is lit if this port is in "on" state


► *Channel Assignment:*

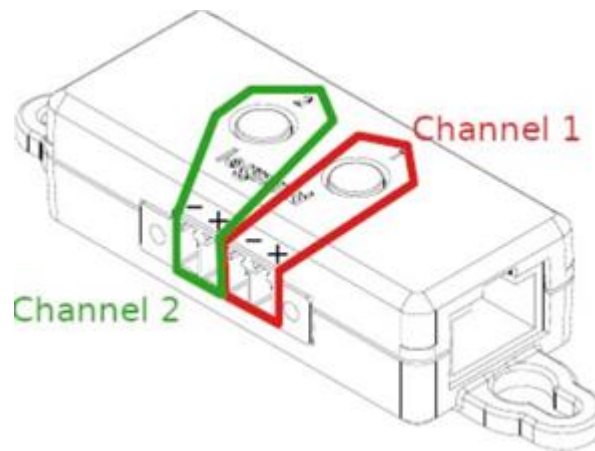

DX2-PD2C5 Powered Dry Contact and Contact Closure Sensor


DX2-PD2C5 sensor package provides:

- Two RJ45 connectors - for connection to the Sensor port of the supported managing device and chaining
- Five contact closure sensors
- Two powered dry contacts
- Six DIP switches
- Five LEDs

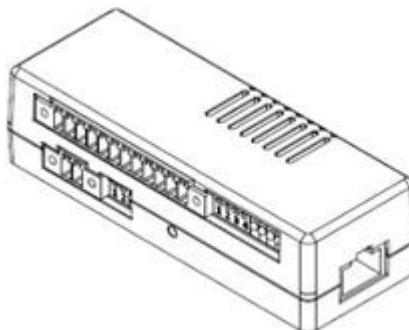

A label is attached to DX2-PD2C5 to help you identify different channels


► *DX2-PD2C5 Label:*

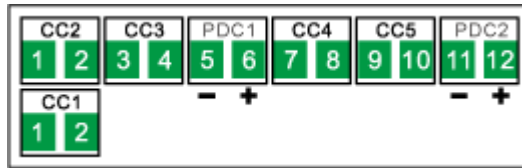

- CC represents a contact closure sensor channel. There are five CC channels: CC1 through CC5
- PDC represents a dry contact signal actuator channel that is powered. There are two PDC channels: PDC1 and PDC2. Note that each PDC channel has two electrical polarity markings below it: - (negative) and + (positive), which you must follow when connecting an EMKA door handle

► *DX2-PD2C5 terminals, DIP switches, and LEDs:*


Terminals, DIP switches, and LEDs are separated into two rows as shown below

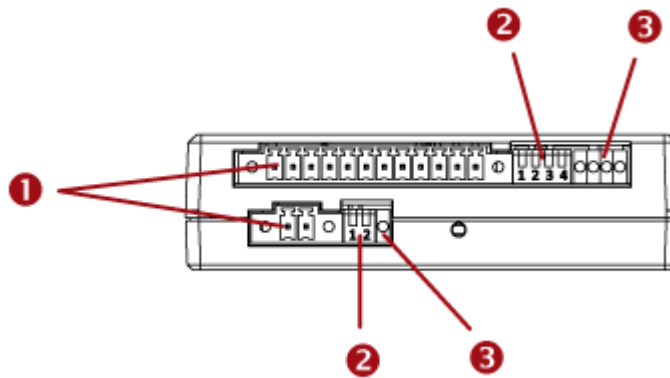

Numbers	Components
1	<p>CC and PDC channels.</p> <ul style="list-style-type: none"> • <i>Top row:</i> Four CC channels (CC2 - CC5). Two PDC channels (PDC1 - PDC2). • <i>Bottom row:</i> One CC channel (CC1). <p>See Connecting Detectors/Switches to DX2-CC2 (on page 22) for how to connect CC sensors or DC switches.</p>
2	<p>Dip switches for configuring the Normal state of each CC channel. See Adjusting DIP Switches (on page 53).</p> <ul style="list-style-type: none"> • <i>Top row:</i> Dip switch 1 controls CC2.

Numbers Components

Dip switch 2 controls CC3.
Dip switch 3 controls CC4.
Dip switch 4 controls CC5.

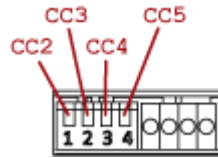

- *Bottom row:*
Dip switch 1 controls CC1.




Note: Dip switch 2 in the bottom row does not control any channel and can be ignored.

3

CC status LEDs. For details, see [DX2-CC2 Contact Closure Sensor LEDs](#) (on page 25).

High-speed flashing of CC1 LED indicates that the sensor is currently upgrading firmware. See [Sensor Firmware Update](#) (on page 58).

- *Top row:*
The four LEDs, from left to right, indicate the states of CC2, CC3, CC4 and CC5 respectively.

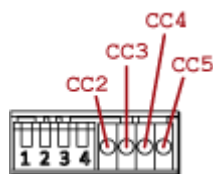


- *Bottom row:*
The LED indicates the CC1 state.



DX2-PS - Particle Sensor

DX2-PS detects dust or particles flowing through it. The sensor package provides:

- Two RJ45 connectors - for connection to the Sensor port of a supported managing device and chaining
- One PS - particle/dust sensor device (SPS30)
- One 150mm cable [EC350VM-04P] to [ZHR-05P] - for connection of the DX2-PS to the SPS30

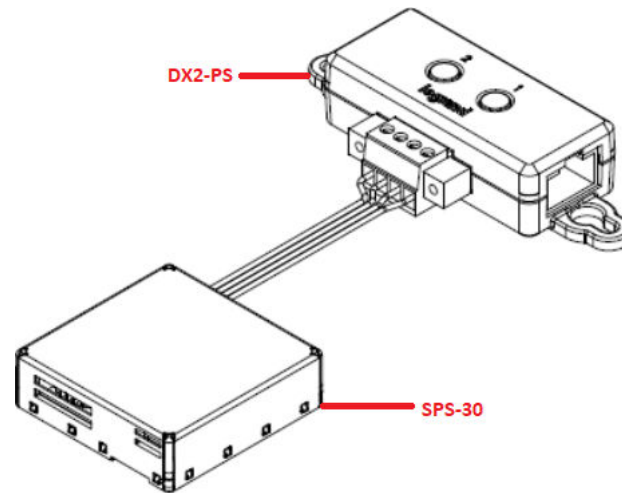

► Particle Sensor

- Reports dust density in $\mu\text{g}/\text{m}^3$
- Detection range: 1-1000 $\mu\text{g}/\text{m}^3$
- Operating range: 0 - 60°C, 0 - 85% RH
- Measures total dust density of categories PM1.0, PM2.5, PM4, PM10
- By default lower critical and lower warning thresholds are deactivated
- Upper critical threshold is set to: 100 $\mu\text{g}/\text{m}^3$
- Upper warning threshold is set to: 50 $\mu\text{g}/\text{m}^3$


Particulate Matter category	Mass Concentration Measurements of Particles	Accuracy
PM 10	0.3 to 10.0 μm	$\pm 25 \mu\text{g}/\text{m}^3$ @ 0 to 100 $\mu\text{g}/\text{m}^3$ $\pm 25 \%$ @ 100 to 1000 $\mu\text{g}/\text{m}^3$
PM 4	0.3 to 4.0 μm	Same as PM 10
PM 2.5	0.3 to 2.5 μm	$\pm 10 \mu\text{g}/\text{m}^3$ @ 0 to 100 $\mu\text{g}/\text{m}^3$ $\pm 10 \%$ @ 100 to 1000 $\mu\text{g}/\text{m}^3$
PM 1.0	0.3 to 1.0 μm	Same as PM 2.5

Note: Each higher category reading contains all particles of the lower categories: PM10 >= PM4 >= PM2.5 >= PM1.0.

DX2-PIR Proximity Infrared Sensor


DX2-PIR contains one occupancy sensor (that is, presence detector), one tamper sensor and a pair of terminals for connecting a contact closure (CC) sensor. The sensor package provides:

- Two RJ45 connectors - for connection to sensor port and chaining
- One infrared sensor for motion detection
- One contact closure sensor
- One tamper sensor
- Two DIP switches
- One LED

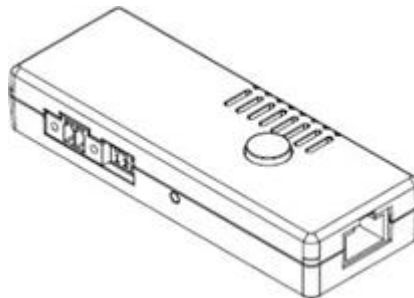


► *Occupancy sensor:*

The occupancy sensor is located on the top of the DX2-PIR. It uses the passive infrared technology to detect the motion of a person by sensing the temperature differences between a person and the surroundings.

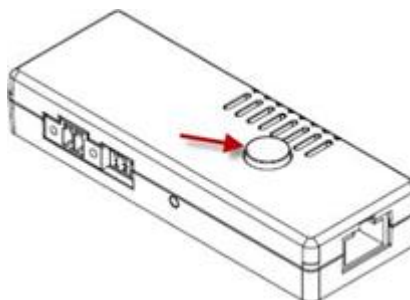


► *Tamper sensor:*

The tamper sensor is located on the back of the DX2-PIR. This sensor is used to detect whether the DX2-PIR is moved away from its original position. In the normal state, the DX2-PIR is firmly affixed to an object so this sensor, which is a button on the back of DX2-PIR, is pressed down. If someone takes the DX2-PIR away, the button springs up so the sensor is in the alarmed state.

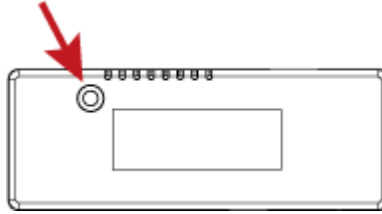

► *DX2-PIR Terminals, DIP switches and LED:*

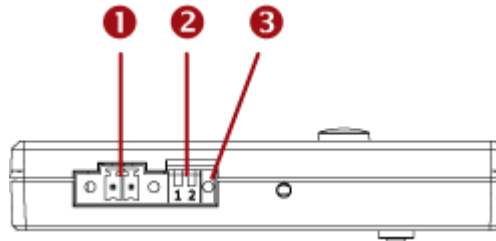

Numbers	Components
①	One CC channel comprising a pair of terminals. See Connecting Detectors/Switches to DX2-CC2 (on page 22) for how to connect a CC sensor.
②	<ul style="list-style-type: none"> Dip switch 1 configures the Normal state of the CC channel. Dip switch 2 controls the built-in occupancy sensor. See Adjusting DIP Switches (on page 53).
③	CC status LED. For details, see DX2-CC2 Contact Closure Sensor LEDs (on page 25). High-speed flashing of CC1 LED indicates that the sensor is currently upgrading firmware. See Sensor Firmware Update (on page 58).

Cascading DX2 Sensor Packages

To increase the number of connected DX2 sensor packages per Sensor port of a supported managing device, you can cascade DX2 using standard network patch cables (CAT5e or higher).


See [Supported Maximum Number of Sensors and Actuators](#) (on page 56).

► *To cascade DX2 sensor packages:*

- 1) Connect a standard network patch cable to either RJ-45 port of the first DX2 sensor package.

Exception: For a device with an "RJ-12" SENSOR port, an RJ-12 to RJ-45 adapter cable (part number: RJ12M-RJ45M) is needed.

- 2) If you want to cascade DX2 packages, get an additional standard network patch cable (CAT5e or higher) and then:
- Plug one end of the cable into the remaining RJ-45 port on the prior DX2 package.
 - Plug the other end into either RJ-45 port on an additional DX2 package.
- Repeat the same steps to cascade more DX2 packages.

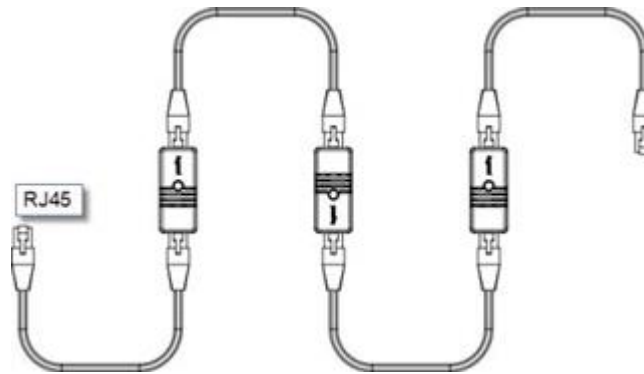

Exception: You CANNOT cascade DX2-DH2C2 packages. For details, see [DX2-DH2C2 Door Handle Controller](#) (on page 7).

DX Series

A DX sensor package consists of terminals, sensors and two RJ-45 ports.

Different DX sensor packages have a different number of terminals. Every pair of terminals is a channel for connecting a sensor or actuator.

DX contact closure channels support the following types of sensors:

- Door open/closed detection
- Door lock detection
- Smoke detection
- Vibration detection

DX contact closure channels do NOT support any water detection sensors.

Important: Third-party leakage detectors may also not work, so you must test them before using.

No sensor cables are shipped with DX sensor packages.

► *With standard network patch cables (CAT5e or higher), you can:*

- Connect a DX sensor to a supported managing device with the RJ-45 SENSOR port.

Exception: For a device with an "RJ-12" SENSOR port, an RJ-12 to RJ-45 adapter cable (part number: RJ12M-RJ45M) is needed.

- Daisy chain DX sensor packages.


Warning: Do NOT use a crossover cable for connection.

In This Chapter

DX-D2C6 Dry Contact and Contact Closure Sensor.	37
DX-PD2C5 - Powered Dry Contact and Contact Closure.	40
DX-PIR Proximity Infrared Sensor.	43
DX-D4C3 Dry Contact and Contact Closure Sensor.	45
DX-VBR Vibration Sensor.	48
Making Connections.	49
Adjusting DIP Switches.	53


DX-D2C6 Dry Contact and Contact Closure Sensor

DX-D2C6 has seven channels for both contact closure sensors and dry contact signal actuators.

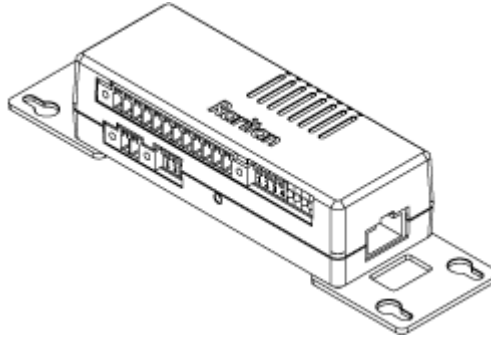

The label attached to DX-D2C6 helps you identify different channels.

► *DX-D2C6 Label:*

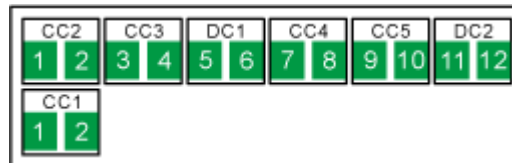


- CC represents a contact closure sensor channel. There are five CC channels: CC1 through CC5.
- DC represents a dry contact signal actuator channel. There are two DC channels: DC1 and DC2.

► *DX-D2C6 hall effect sensor (reserved):*

DX-D2C6 contains a built-in hall effect sensor, which can detect whether a door is open or closed. The hall effect sensor is reserved for future use and currently shall NOT be used. After connecting DX-D2C6 to a managing device, this built-in sensor will be detected and show up in the web interface and SNMP MIB, which is normal.

► *DX-D2C6 terminals, DIP switches, and LEDs:*

Terminals, DIP switches, and LEDs are located in two rows as shown below.

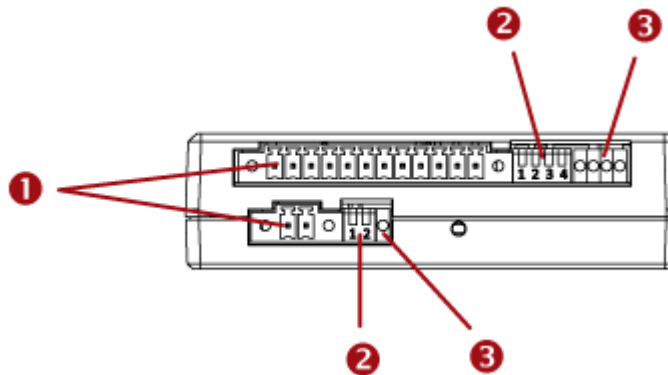

Numbers Components

1


CC and DC channels.

- *Top row:*
Four CC channels (CC2 - CC5).
Two DC channels (DC1 - DC2).
- *Bottom row:*
One CC channel (CC1).
See [Connecting Detectors/Actuators to DX](#) (on page 50) for how to connect CC sensors or DC actuators.


2

DIP switches for configuring the Normal state of each CC channel. See [Adjusting DIP Switches](#) (on page 53).

- *Top row:*
DIP switch 1 controls CC2.
DIP switch 2 controls CC3.
DIP switch 3 controls CC4.
DIP switch 4 controls CC5.

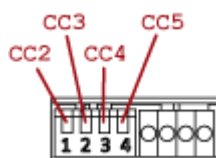

- *Bottom row:*
DIP switch 1 controls CC1.



DIP switch 2 controls the built in hall effect sensor.

Tip: If an alert is shown for this hall effect sensor, you can disable it by turning on/off DIP switch 2.

Numbers Components


3

CC status LEDs. For details, see [DX2-CC2 Contact Closure Sensor LEDs](#) (on page 25).

High-speed flashing of CC1 LED indicates that the DX firmware upgrade is in progress. See [Sensor Firmware Update](#) (on page 58).

- *Top row:*

The four LEDs, from left to right, indicate the states of CC2, CC3, CC4 and CC5 respectively.

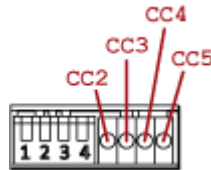

- *Bottom row:*

The LED indicates the CC1 state.




DX-PD2C5 - Powered Dry Contact and Contact Closure

DX-PD2C5 is physically similar to DX-D2C6 except for the following differences:

- Dry contact signal channels of DX-PD2C5 supply DC 12V power to the connected actuators.
- Dry contact signal channels of DX-PD2C5 only support the connection of EMKA (1150-U5x) door handles.
- DX-PD2C5 works with PX3 PDUs, PX3TS transfer switches and Legrand PDUs only.
- Maximum cabling length of 29 feet (9 meters). For details, see [Supported Maximum Sensor Distance](#) (on page 55).
- No asset management strips can be connected simultaneously.

Warning: If high security is required, it is strongly recommended that DX-PD2C5 shall NOT be used.

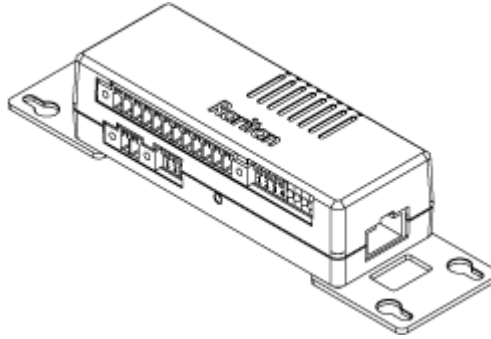

A label is attached to DX-PD2C5 to help you identify different channels.


► *DX-PD2C5 Label:*

CC2	1	2	CC3	3	4	PDC1	5	6	CC4	7	8	CC5	9	10	PDC2	11	12
							-	+								-	+
CC1	1	2															

- CC represents a contact closure sensor channel. There are five CC channels: CC1 through CC5.
- PDC represents a dry contact signal actuator channel which is powered. There are two PDC channels: PDC1 and PDC2. Note that each PDC channel has two electrical polarity markings below it: - (negative) and + (positive), which you must follow when connecting an EMKA door handle.

► *DX-PD2C5 terminals, DIP switches, and LEDs:*

Terminals, DIP switches, and LEDs are separated into two rows as shown below.

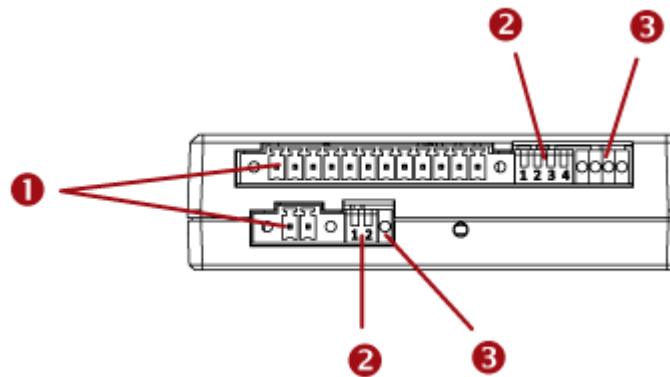

Numbers Components

1

CC and PDC channels.


- *Top row:*
Four CC channels (CC2 - CC5).
Two PDC channels (PDC1 - PDC2).
- *Bottom row:*
One CC channel (CC1).

See [Connecting Detectors/Actuators to DX](#) (on page 50) for how to connect CC sensors or DC actuators.

2

Dip switches for configuring the Normal state of each CC channel. See [Adjusting DIP Switches](#) (on page 53).

- *Top row:*
Dip switch 1 controls CC2.
Dip switch 2 controls CC3.
Dip switch 3 controls CC4.
Dip switch 4 controls CC5.

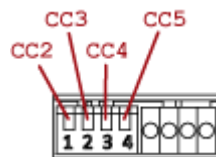

- *Bottom row:*
Dip switch 1 controls CC1.



Note: Dip switch 2 in the bottom row does not control any channel and can be ignored.

Numbers Components


3

CC status LEDs. For details, see [DX2-CC2 Contact Closure Sensor LEDs](#) (on page 25).

High-speed flashing of CC1 LED indicates that the DX firmware upgrade is in progress.


- *Top row:*

The four LEDs, from left to right, indicate the states of CC2, CC3, CC4 and CC5 respectively.

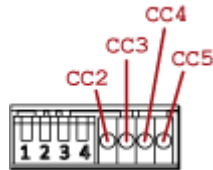


- *Bottom row:*

The LED indicates the CC1 state.




DX-PIR Proximity Infrared Sensor

DX-PIR contains one occupancy sensor (that is, presence detector), one tamper sensor and a pair of terminals for connecting a contact closure (CC) sensor.

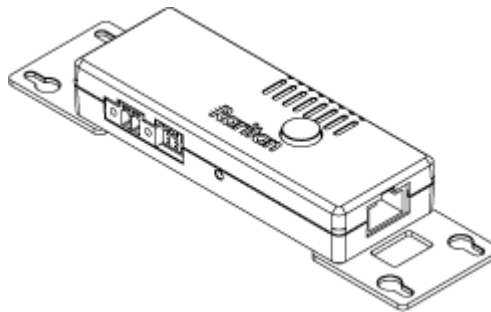

► *Occupancy sensor:*


The occupancy sensor is located on the top of the DX-PIR. It uses the passive infrared technology to detect the motion of a person by sensing the temperature differences between a person and the surroundings.

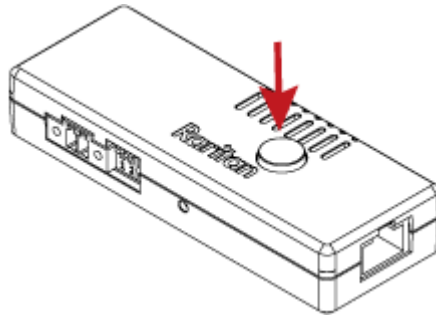

The diagrams below show the occupancy sensor's detection range and sensing area.


Side View

- Maximum range: 5 meters
- Vertical sensing area: 82 degrees (+/- 41 degrees)

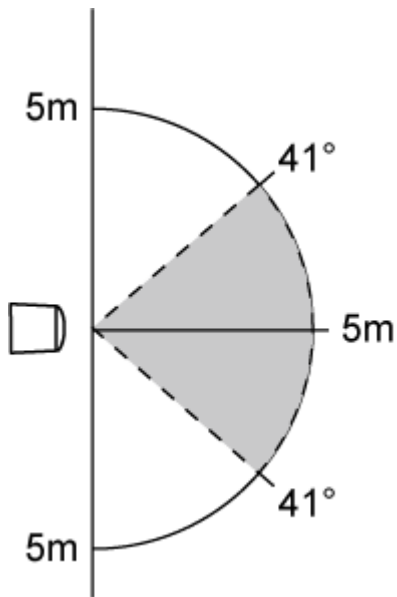

Top View

- Maximum range: 5 meters
- Horizontal sensing area: 94 degrees (+/- 47 degrees)

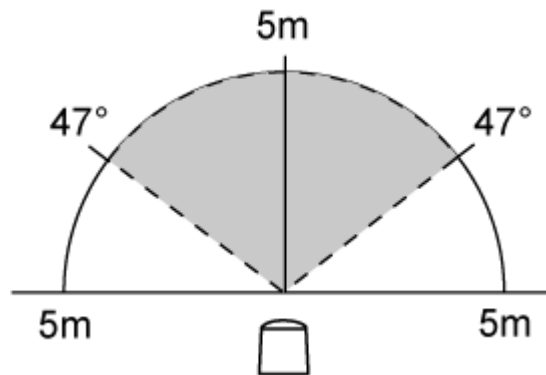


Conditions for the detected target:


- Temperature difference between the target and the surroundings should exceed 4 degrees Celsius (7.2 degrees Fahrenheit).
- Target's movement speed: 1.0 m/s.
- Target concept is human body (size: 700 x 250 mm).

► *Tamper sensor:*

The tamper sensor is located on the back of the unit. This sensor is used to detect whether the unit is moved away from its original position. In the normal state, the unit is firmly affixed to an object so this sensor, which is a button on the back of unit, is pressed down. If someone takes the unit away, the button springs up so the sensor is in the alarmed state.

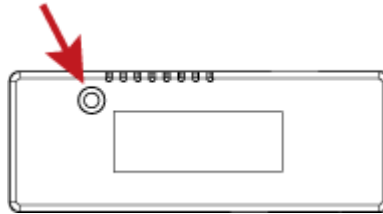


► *DX-PIR Terminals, DIP switches and LED:*

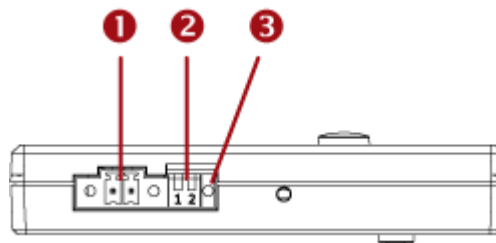

Numbers	Components
1	One CC channel comprising a pair of terminals. See Connecting Detectors/Actuators to DX (on page 50) for how to connect a CC sensor.
2	<ul style="list-style-type: none"> DIP switch 1 configures the Normal state of the CC channel. DIP switch 2 has no effect. See Adjusting DIP Switches (on page 53).
3	CC status LED. For details, see DX2-CC2 Contact Closure Sensor LEDs (on page 25). High-speed flashing of CC1 LED indicates that the DX firmware upgrade is in progress. See Sensor Firmware Update (on page 58).

DX-D4C3 Dry Contact and Contact Closure Sensor

DX-D4C3 contains four channels for dry contact signal actuators and three channels for contact closure sensors.

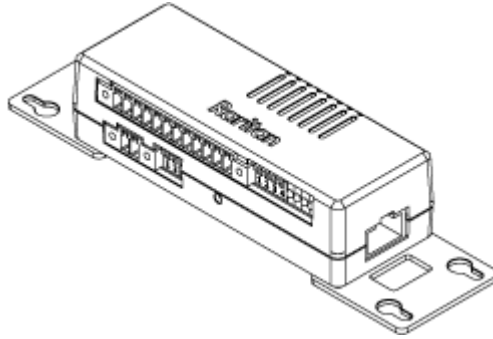

The label attached to DX-D4C3 helps you identify each channel.


► *DX-D4C3 Label:*

CC2	CC3	DC1	DC2	DC3	DC4
1 2	3 4	5 6	7 8	9 10	11 12
CC1					
1 2					

- CC represents a contact closure sensor channel. There are three CC channels: CC1 through CC3.
- DC represents a dry contact signal actuator channel. There are four DC channels: DC1 through DC4.

► *DX-D4C3 terminals, DIP switches, and LEDs:*

Terminals, DIP switches, and LEDs are located in two rows as shown below.

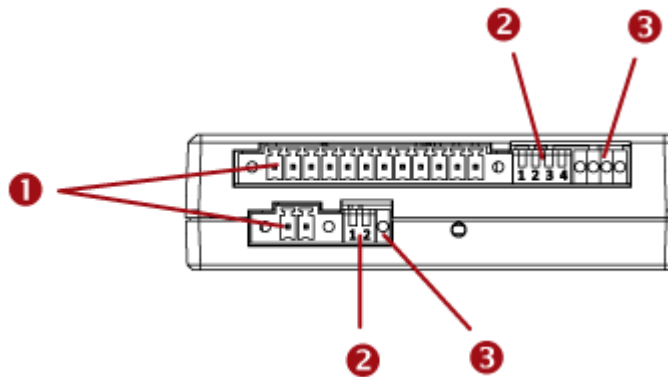

Numbers Components

1

CC and DC channels.


- *Top row:*
2 CC channels (CC2 - CC3).
4 DC channels (DC1 - DC4).
- *Bottom row:*
One CC channel (CC1).

See [Connecting Detectors/Actuators to DX](#) (on page 50) for how to connect CC sensors or DC actuators.


2

Dip switches for configuring the Normal state of each CC channel. See [Adjusting DIP Switches](#) (on page 53).

- *Top row:*
Dip switch 1 controls CC2.
Dip switch 2 controls CC3.

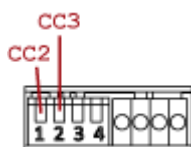

- *Bottom row:*
Dip switch 1 controls CC1.



Note: Dip switches 3 and 4 in the top row and DIP switch 2 in the bottom row do not control any channel and can be ignored.

Numbers Components


3

CC status LEDs. For details, see [DX2-CC2 Contact Closure Sensor LEDs](#) (on page 25).

High-speed flashing of CC1 LED indicates that the DX firmware upgrade is in progress. See [Sensor Firmware Update](#) (on page 58).

- *Top row:*

The two leftmost LEDs, from left to right, indicate the states of CC2 and CC3 respectively.

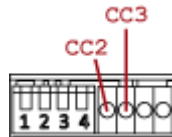

Note: The two rightmost LEDs in the top row are not associated with any CC channels and can be ignored.


- *Bottom row:*

The LED indicates the CC1 state.



DX-VBR Vibration Sensor

DX-VBR contains one vibration sensor and a pair of terminals for connecting a contact closure (CC) sensor.

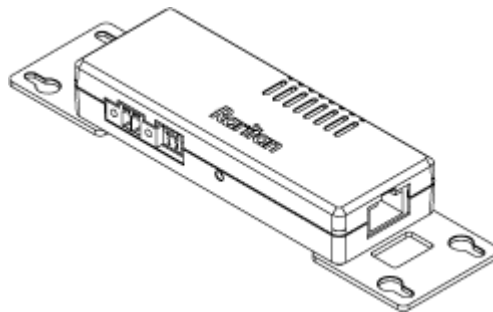


► *Vibration sensor:*

The built-in vibration sensor detects the vibration of any object where DX-VBR is affixed.

- Range: 0 - 13.85g
- Accuracy: +-0.1g

► *DX-VBR Terminals, DIP switches and LED:*

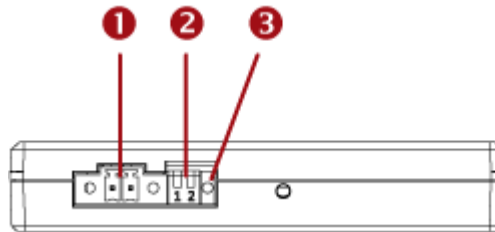


Numbers	Components
①	One CC channel comprising a pair of terminals. See Connecting Detectors/Actuators to DX (on page 50) for how to connect a CC sensor.
②	<ul style="list-style-type: none">• Dip switch 1 configures the Normal state of the CC channel.• Dip switch 2 does not control any CC channel and can be ignored. See Adjusting DIP Switches (on page 53).
③	CC status LED. For details, see DX2-CC2 Contact Closure Sensor LEDs (on page 25).

Making Connections

Pre-installed DX Brackets

To allow you to hang or affix a DX onto an object or position, two brackets have been installed on the rear side of a DX sensor package when shipped out of the factory.

Below is the diagram of a DX sensor package with two brackets installed.

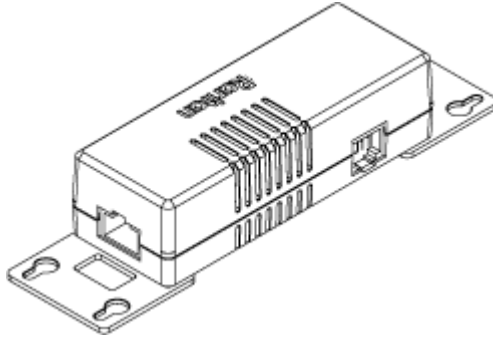

Connecting Detectors/Actuators to DX


A DX sensor package comprises two parts: a sensor box and the terminal module(s). A terminal module is removable.

Note: The following diagrams illustrate a terminal module comprising two termination points only. Your DX terminal module may be larger if it has more terminals.


► *To make connections when the terminal module is attached:*

- 1) Strip the insulation around 12 mm from the end of each wire of a detector or actuator.
 - Wire size range: AWG 28 to 20 or 0.09 to 0.5 mm²
- 2) Fully insert each wire into each termination point of a CC, DC or PDC channel on the DX sensor package.

Important: For a PDC channel, you must check the electrical polarity markings (+ and -) on the DX label to make sure each wire is inserted into the correct termination point with the correct polarity.

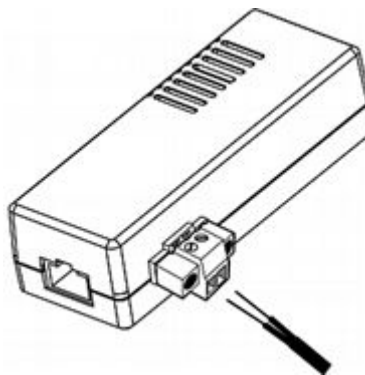


- 3) Use a screwdriver with a 2.5 mm wide shaft to tighten the screws above each termination point to secure the wires, using a torque of 0.196 N·m (2 kgf·cm).

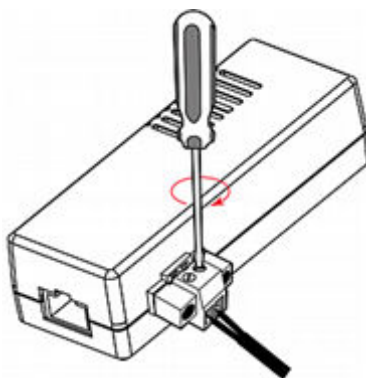


► To make connections after the terminal module is detached:

- 1) Loosen the screws at two sides of the terminal module.


Note: The two screws are not removable so just loosen them.

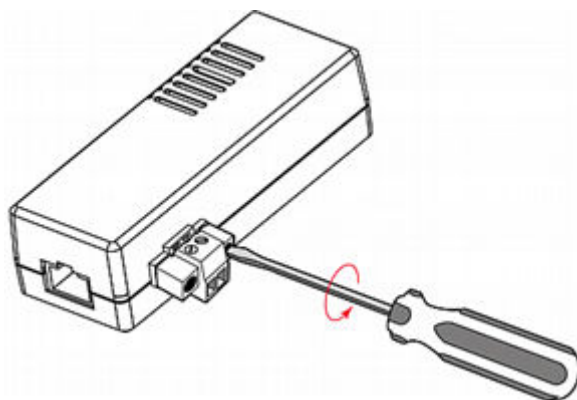

- 2) Separate the terminal module from the sensor box.

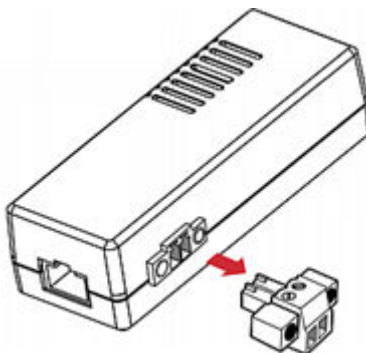


- 3) After connecting detectors/switches to the terminal module, plug the terminal module back into the sensor box, and then tighten the screws at two sides of the terminal module.

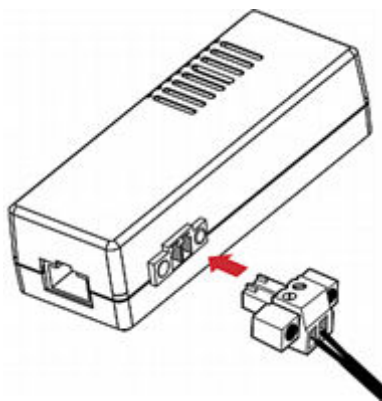

Cascading DX Sensor Packages

To increase the number of connected DX sensor packages per SENSOR port, you can cascade DX using standard network patch cables (CAT5e or higher).

See [Supported Maximum Number of Sensors and Actuators](#) (on page 56).

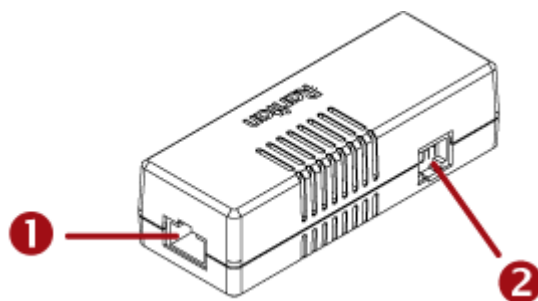

Numbers	Components
1	RJ-45 ports, each of which is located on either end of a DX sensor package.
2	RJ-12 port, which is reserved for future use and is hidden now.

► *To cascade DX sensor packages:*

- 1) Connect a standard network patch cable to either RJ-45 port of the first DX sensor package.

Exception: For a device with an "RJ-12" SENSOR port, an RJ-12 to RJ-45 adapter cable (part number: RJ12M-RJ45M) is needed.

- 2) If you want to cascade DX packages, get an additional standard network patch cable (CAT5e or higher) and then:
- Plug one end of the cable into the remaining RJ-45 port on the prior DX package.
 - Plug the other end into either RJ-45 port on an additional DX package.
- Repeat the same steps to cascade more DX packages.



Exception: You CANNOT cascade DX-PD2C5 sensor packages. For details, see [DX-PD2C5 - Powered Dry Contact and Contact Closure](#) (on page 40).

Adjusting DIP Switches

There are two Normal settings for each CC channel on DX packages.

- N.O (Normally Open): The open status of the connected detector/switch is considered normal. An alarm is triggered when the detector/switch turns closed.
- N.C (Normally Closed): The closed status of the connected detector/switch is considered normal. An alarm is triggered when the detector/switch turns opened.

Each CC channel and the DX-PIR occupancy sensor's Normal setting is configured by turning on or off its corresponding DIP switch.

► To adjust DIP switches for CC channels:

- N.O: Turn ON the DIP switch by pressing it down.
- N.C: Turn OFF the DIP switch by pushing (or keeping) it up.

► To adjust the DIP switch for DX-PIR occupancy sensor:

- Turn it OFF (up) when human absence is considered the normal state.
- Turn it ON (down) when human presence is considered the normal state.

Sensor-Mixing

DX2 and DX sensors can be mixed in any combination, as long as the maximums for distance and number are not exceeded.

Appendix A Supported Maximum Sensor Distance


► *Maximum cable distance for most sensor packages:*

DX and DX2 sensor packages support a total cabling length up to 98 feet (30 meters), except for door handle sensors: DX-PD2C5, DX2-DH2C2, and DX2-PD2C5.

► *Exception -- DX2-DH2C2, DX-PD2C5, DX2-PD2C5:*

Maximum cabling length of 29 feet (9 meters) instead of 98 feet (30 meters). The following illustrates DX2-DH2C2 cabling restriction, but the same principle also applies to DX2-PD2C5/DX-PD2C5.

- The length from the managing device to DX2-DH2C2 is up to 16 feet (5 meters).
- The length from DX2-DH2C2 to the connected door handle is up to 13 feet (4 meters).

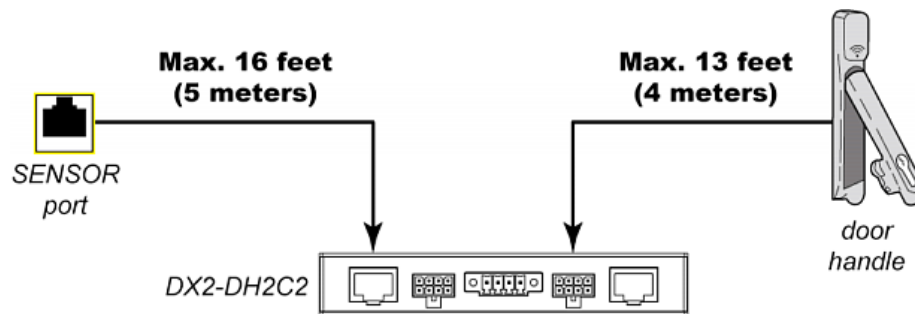

► *Sensor hubs:*

A sensor hub is used to increase the total distance of a sensor package. DO NOT cascade sensor hubs.

Different sensor hubs support different sensor packages:

- DX2-REMHUB4 and DX2-ENVHUB4 both support all sensor packages.
- DX2-REMHUB4 is only supported with SRC 0800/0803.

Appendix B Supported Maximum Number of Sensors and Actuators

The maximum number of sensors and actuators that can be managed per sensor port of a supported managing product is 32 sensors or actuators. These sensors may be part of a "sensor package" containing multiple sensors or actuators, such as a DX2-T1H1, which is 1 package with 2 sensors. The maximum number of packages that can be managed per Sensor port of a supported managing device is 12 packages.

► *Calculation examples for managed sensors/actuators:*

A sensor package may contain more than one sensor/actuator, and each sensor or actuator is counted as an individual function. You cannot exceed 64 functions per sensor port.

For example:

A DX2-T1H1 contains 2 sensors so it has 2 functions.

- A DX-D2C6 contains 6 sensors and 2 actuators so it has 8 functions.

► *Tip for managed/unmanaged sensors:*

To avoid exceeding the maximum of managed sensors/actuators per sensor port, you can manage "partial" sensors/actuators of each DX/DX2 and unmanage the rest.

Appendix C Sensor Measurement Accuracy

This section shows the factory specifications of environmental sensor packages. Calibration is not required for these sensor packages.

In This Chapter

DX2 Sensor Accuracy. 57

DX2 Sensor Accuracy

- Temperature: +/-1.0 degree Celsius (when temperature = 20 to 70 degrees Celsius)
 - +/-1.0 degree Celsius is equal to +/-1.8 degrees Fahrenheit
- Humidity: +/-5% (when humidity = 10% to 90%)
- Differential Air Pressure: +/- 1.5% FS at 25 degrees Celsius, 50% RH; Range: -250 - 250 Pa
- Airflow: Range: 0-4 m
- Floor Water Sensor: Range: 0-10 meters
- Rope Water Sensor: Range: 0-10 meters, Cable length: +/- 0.5 meter at 25 degrees Celsius, 64% RH; Leak distance: +/- 1 meter at 25 degrees Celsius, 50% RH, 10 meter cable. Note: when multiple simultaneous leaks are detected, leak distance accuracy of 1 meter is not guaranteed. Check the whole distance of the rope for multiple leaks if the leakage distance provided does not locate a leak.

Appendix D Sensor Firmware Update

Sensor packages automatically upgrade or downgrade their firmware after being connected to a supported managing device.

Information regarding current sensor firmware version and the sensor's firmware update time is available in the Device Information dialog. Choose Maintenance > Device Information > Peripheral Devices in the web interface of your supported managing device.

Appendix E Sensor Naming Conventions

The model name of an environmental sensor package consists of sensor family, sensor functions and the total number of the specified functions.

[Family] - [Function_1] [Number_1]

- OR -

[Family] - [Function_1] [Number_1] [Function_2] [Number_2]

- [Family] is DX or DX2.
- [Number_1] and [Number_2] are integer numbers.
- [Function_1] and [Function_2] are abbreviations representing diverse functions.

Note: Some sensor packages may indicate the main function only rather than indicating all functions in its name. For example, the name of DX2-VBR indicates that it contains the vibration sensor while it does not indicate the contact closure sensor that it also contains.

Abbreviations	Functions
AF	Airflow sensors
CC or C	Contact closure sensor terminals
D	Dry contact signal terminals for actuators
DH	The port to connect a door handle
DP	Differential air pressure sensors
H	Humidity sensors
PD	"Powered" dry contact signal terminals
PIR	Passive infrared occupancy sensor
PS	Particle/dust sensor
T	Temperature sensors
VBR	Vibration sensors
WSC or WC	Cable water sensors
WSF	Floor-mounted water sensors

Index

A

Adjusting DIP Switches 53

B

Bracket Installation 10

C

Cable Water Sensor 19

Cascading DX Sensor Packages 52

Cascading DX2 Sensor Packages 35

Configuring DX2-CC2's Normal State 24

Connecting Detectors/Actuators to DX 50

Connecting Detectors/Switches to DX2-CC2 22

D

DX Series 37

DX2 LED States for Temperature and Humidity 12

DX2 Sensor Accuracy 57

DX2 Series 7

DX2 Temperature and Humidity Sensors 11

DX2-AF1 - Airflow Sensors 14

DX2-AF1 LED States 15

DX2-CC2 Contact Closure Sensor 21

DX2-CC2 Contact Closure Sensor LEDs 25

DX2-D2 Dual Dry-Contact Sensor 25

DX2-D2C6 Dry Contact Contact Closure Sensor 26

DX2-DH2C2 Door Handle Controller 7

DX2-DH2C2 LED States 11

DX2-PD2 - Dual Powered Dry-Contact Sensor 29

DX2-PD2C5 Powered Dry Contact and Contact Closure Sensor 30

DX2-PIR Proximity Infrared Sensor 34

DX2-PS - Particle Sensor 33

DX2-T1DP1 - Temperature and Differential Air Pressure Sensors 13

DX2-WS1 - Water Sensors 16

DX2-WS1 LED States 18

DX-D2C6 Dry Contact and Contact Closure Sensor 37

DX-D4C3 Dry Contact and Contact Closure Sensor 45

DX-PD2C5 - Powered Dry Contact and Contact Closure 40

DX-PIR Proximity Infrared Sensor 43

DX-VBR Vibration Sensor 48

F

Floor-mounted Water Sensor 18

H

How a Cable Water Sensor Works 20

How a Floor-mounted Water Sensor Works 19

M

Making Connections 49

P

Pre-installed DX Brackets 49

S

Sensor Comparison 6

Sensor Firmware Update 58

Sensor Measurement Accuracy 57

Sensor Naming Conventions 59

Sensor Overview 5

Sensor Support Guidelines 6

Sensor-Mixing 54

Supported Managing Products 5

Supported Maximum Number of Sensors and Actuators 56

Supported Maximum Sensor Distance 55

W

What's New in the Environmental Sensors and Actuators Guide 4